



DEH-40283 Installation Instructions


MANUAL MOTOR STARTER
DISJONCTEURS MOTEURS
MOTORSCHUTZSCHALTER
INTERRUPTT PROTEZ MOTORE
INTERRUPTOR AUTOMATICO
DISJUNTOR PARA MOTOR
MOTORBEVEILINGSSCHAKELAAR



- WARNING:** Disconnect power from source before installing, modifying or servicing.
ATTENTION: Couper l'alimentation avant installation, modification ou entretien.
WARNUNG: Netzspannung abschalten, bevor Installations, Montage oder Instandhaltungsarbeiten durchgeführt werden.
ATTENZIONE: Togliere alimentazione prima dell'installazione e di qualunque manutenzione.
ATENCIÓN: Quitar la tensión antes del montaje y antes de hacer cualquier manipulación.
ATENÇÃO: Desligar antes de instalar, modificar ou reparar.
OPGELET: Netspanning onderbreken bij installatie, wijzigingen en onderhoud.

IP41/TYPE 1

IP55/TYPE 1,3R,12

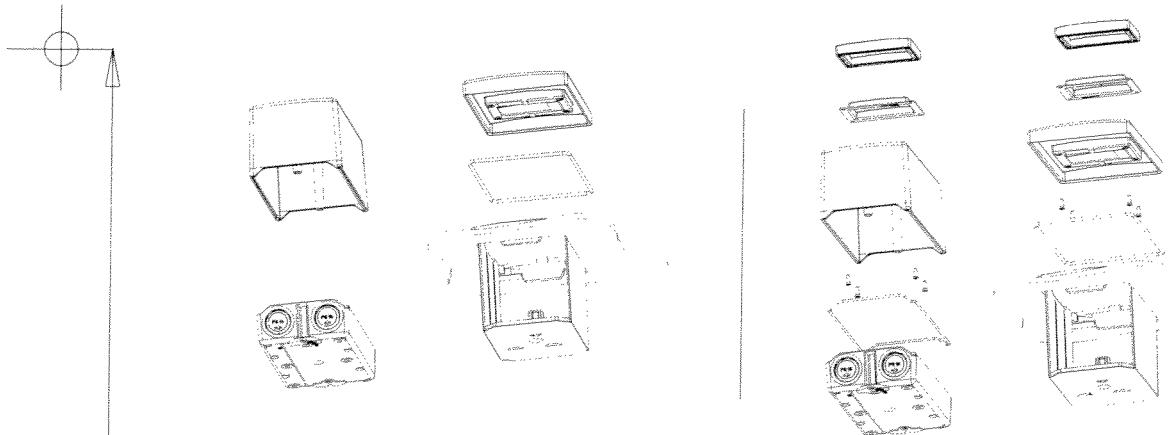

GPES41A


GPEF41A

GPES55A

GPEF55A


145

MOUNTING
MONTAGE
MONTAGE
MONTAGGIO
MONTAJE
MONTAGEM
BEVESTIGING

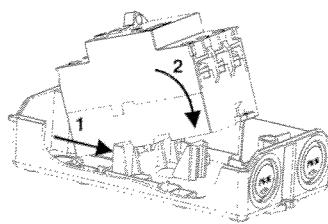


GPES_




GPEF_

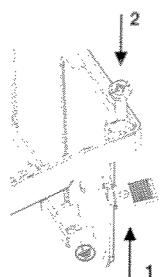

GPEF_

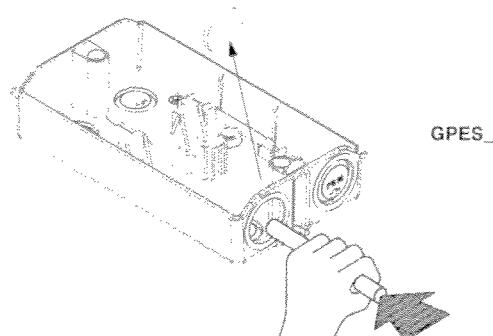

GPES_

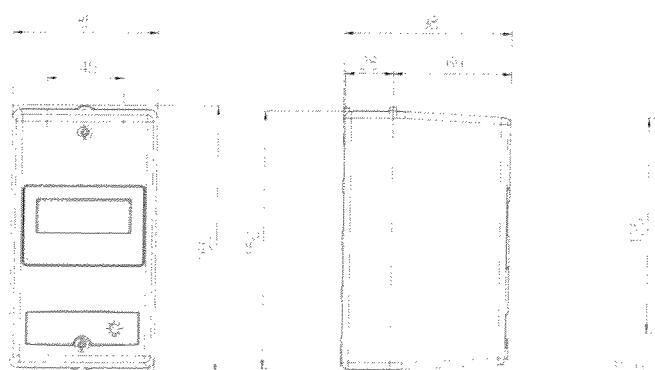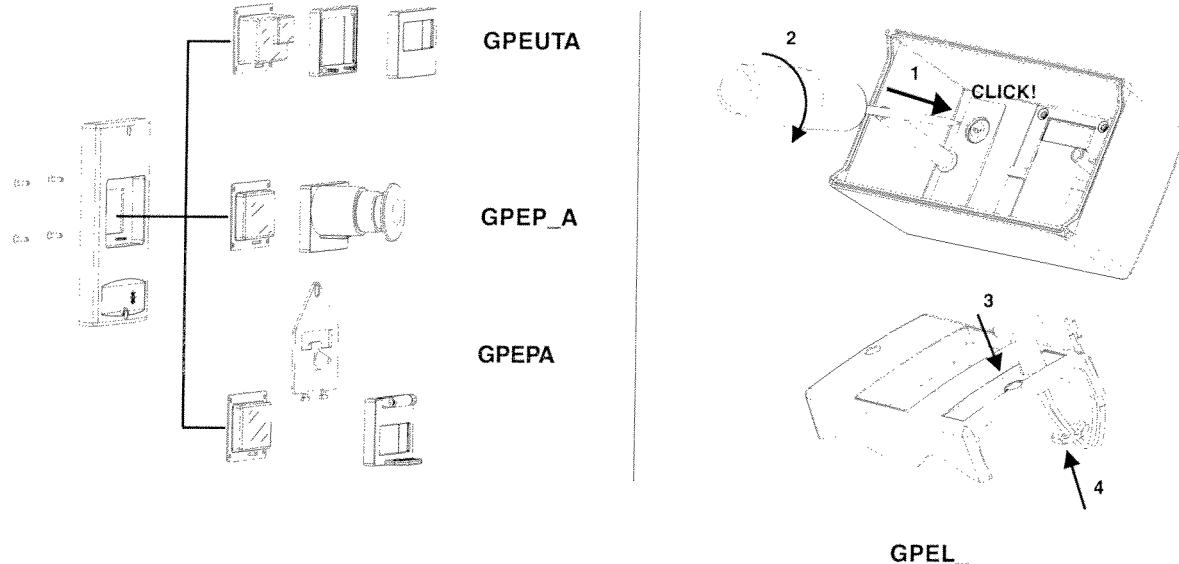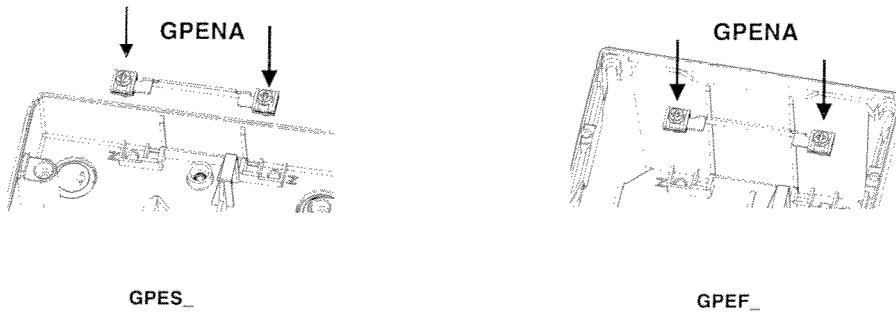

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the GE Company.

GE Power Controls

©GE Power Controls 2000

GE Industrial Systems

41 Woodford Ave.
Plainville, CT USA