



INSTALLATION INSTRUCTIONS

AUXILIARY SWITCH

FOR TYPES TKR, THKR — WITHOUT GROUND FAULT

NOTE: *U/L listing is voided when the circuit breaker is modified to add an accessory. The U/L label must be destroyed.*

AUXILIARY SWITCH — GENERAL

Provides remote indication of circuit breaker main contact position — OPEN or CLOSED.

ELECTRICAL DATA

Switch Contacts	Voltage Rating	No. of Switches	Catalog Number
 Breaker ON	6 Ampere-240Vac	1	TKRAS2AB1R
	½ Ampere-125Vac	2	TKRAS2AB2R
	¼ Ampere-250Vac	3	TKRAS2AB3R
		4	TKRAS2AB4R
 Breaker OFF or TRIPPED	+6 Ampere-600Vac	1	TKRAS6AB1R
	½ Ampere-125Vac	2	TKRAS6AB2R
	¼ Ampere-250Vac	3	TKRAS6AB3R
		4	TKRAS6AB4R

*Formerly Green

+ Not U/L Listed

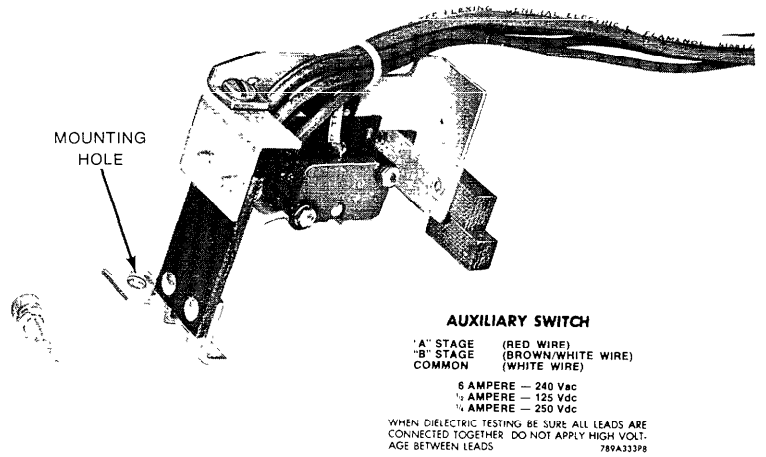


Figure 1

INSTALLATION

WARNING: *The Circuit Breaker must be completely de-energized and disconnected from the circuit when accessories are installed.*

1. Place the breaker in a TRIPPED position (handle at midpoint) by depressing the trip button.
2. Remove (4) breaker cover mounting screws (2 screws accessible under load lug cover), programmer cover, adjustment knobs and load lug cover. Remove shutter. (Figure 2)

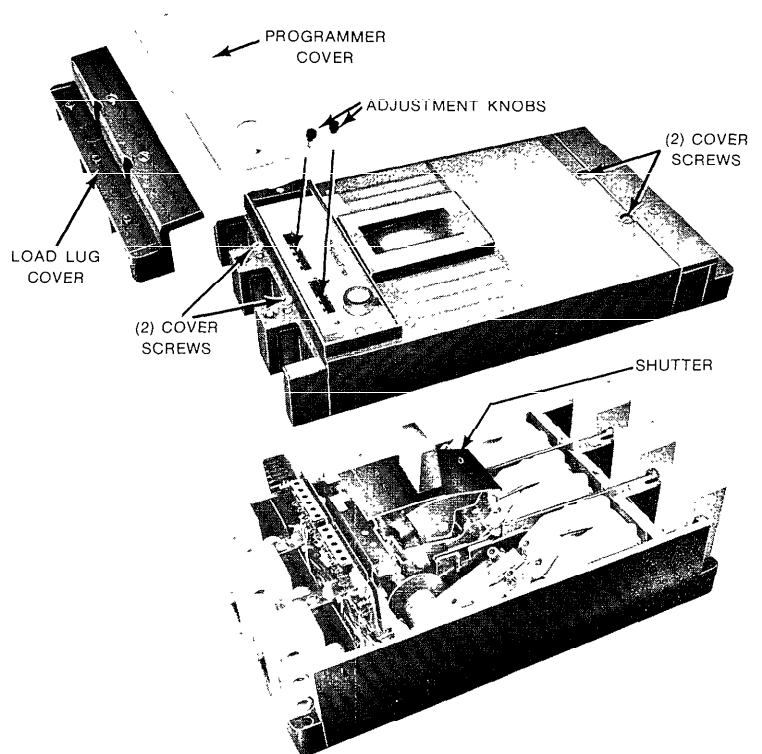


Figure 2

(Continued on Reverse Side)

3. Remove mounting screw and note position of locating notches and cross bar. (Figure 3)

4. Install accessory as shown using mounting screw and locating notches for positioning. Insure that actuator lever is positioned behind cross bar. (Figure 4)

5. Slot cover for lead exit as shown and affix label (Figure 5)

6. Replace shutter and breaker cover, taking care that strain relief ties are placed one on each side of cover slot.

7. Circuit continuity check
Check continuity of auxiliary switch with breaker in the ON, OFF and TRIPPED positions.

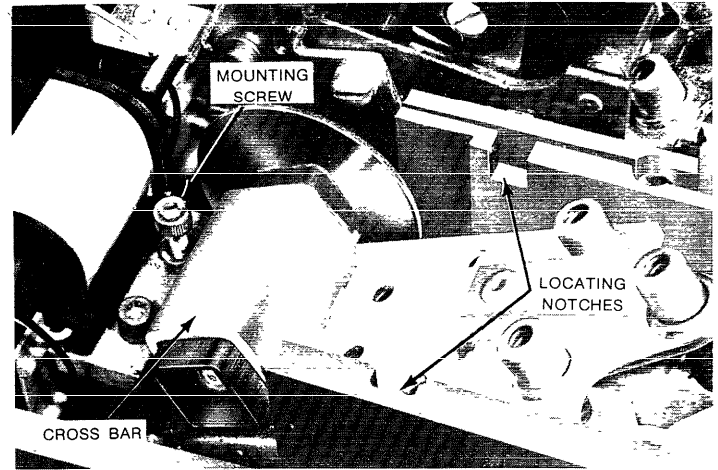


Figure 3


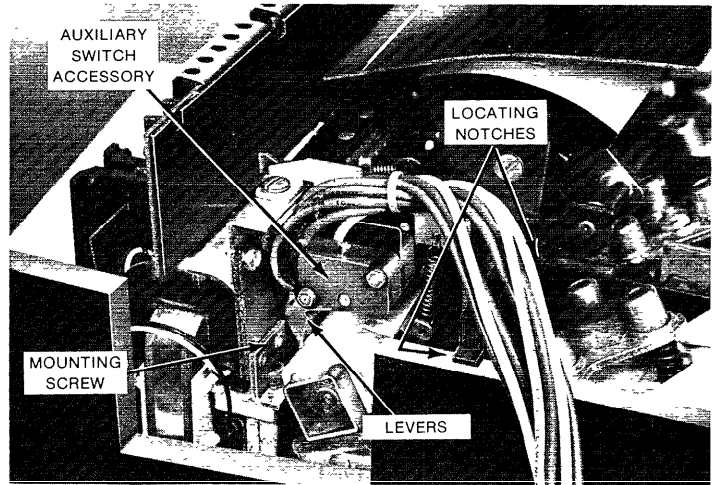


Figure 4

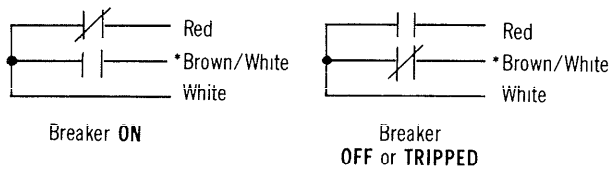

*Formerly Green

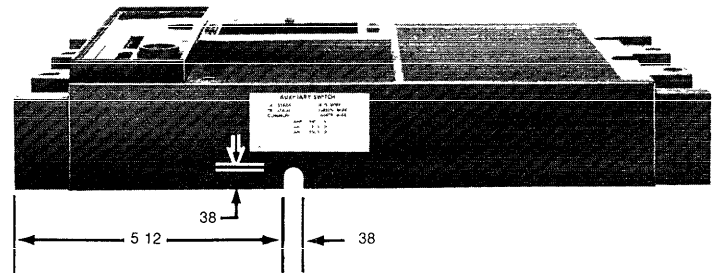


Figure 5

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company